


Memory Upgrade

The A2000 Series Notebook do not have onboard RAM. There are two SO-DIMM sockets for installing SO-DIMM RAM. It can upgrade the total memory size up to 1GB with a 512MB module on each socket.


Upgrading Memory Module

First, remove AC-power and battery.


1. Stick the tip of a small screwdriver in the tiny hole, and then slide the keyboard cover to the left side at the same time remove the keyboard cover. Pull the keyboard out to the front and place it face down on the Top case.

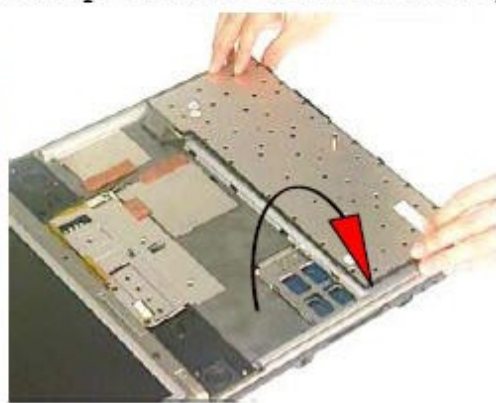



2. Remove 2 copper foils. Remove 2 screws (M2*3L) (M2*13L) .

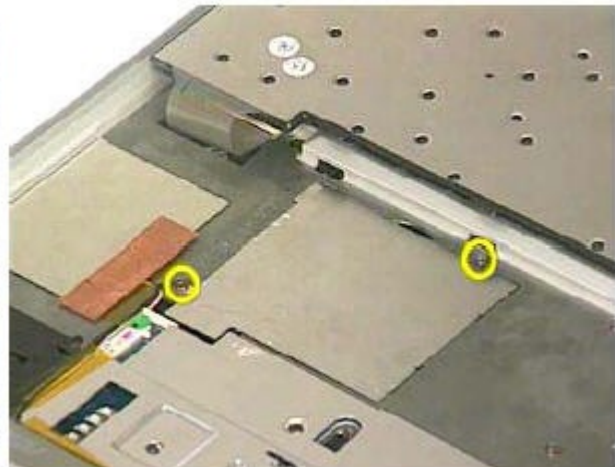

3. Then remove DDR DIMM Cover. Insert the Memory module into the memory socket at 45 degrees angle and push it in the socket to latch it place.

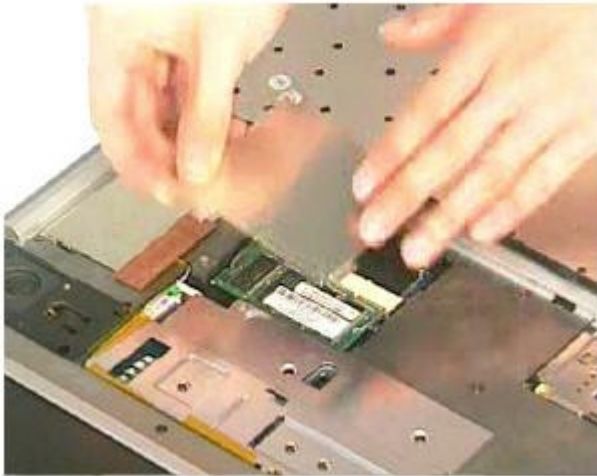

4. Insert the DDR DIMM cover at angle of 45 degrees here and to press down and then secure 2 screws (M2*3L) (M2*13L) to fix it. Paste 2 copper foils.

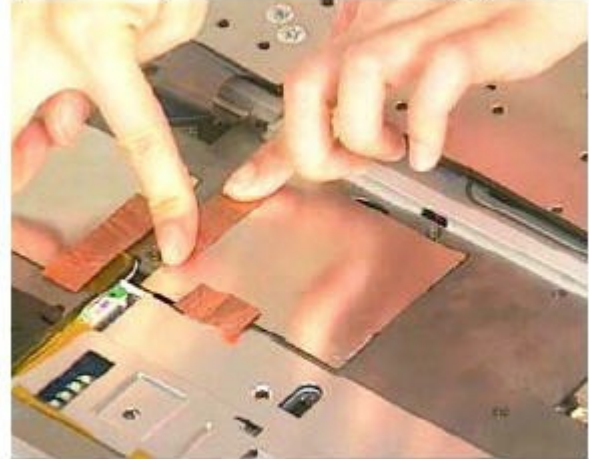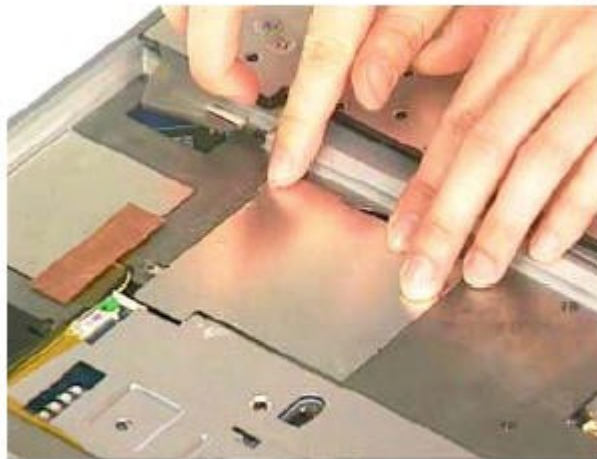

5. Replace and turn the keyboard module over and slide it into place. Place the keyboard cover on top case then push the keyboard cover rightward to lock it.

